

Figure 10.44. Left: Stress-strain curves for a [0] ply, three laminates: Hard2, [π/4] and Soft2, and trace-normalized strength with same strain to failure of [0]; Right: Master stress-strain curves compared with experimental data. Trace-based lamination factors shown in blue. Material: T4708/MR60H.

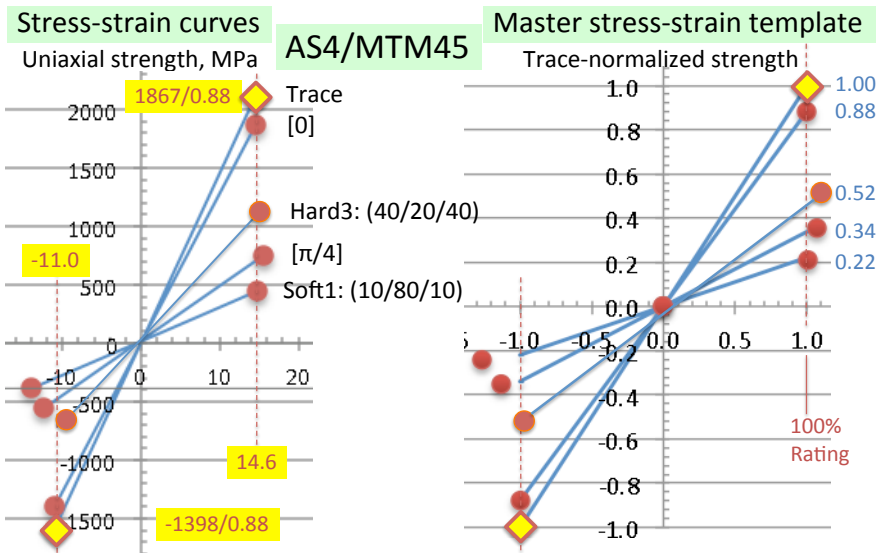


Figure 10.45. Left: Stress-strain curves for a [0] ply, three laminates: Hard3, [π/4] and Soft1, and trace-normalized strength with same strain to failure of [0]; Right: Master stress-strain curves compared with experimental data. Trace-based lamination factors shown in blue. Material: AS4/MTM45.